


# PRE-WIRING OF ELECTRICAL INSTALLATION WALL MOUNTED THERMOSTAT

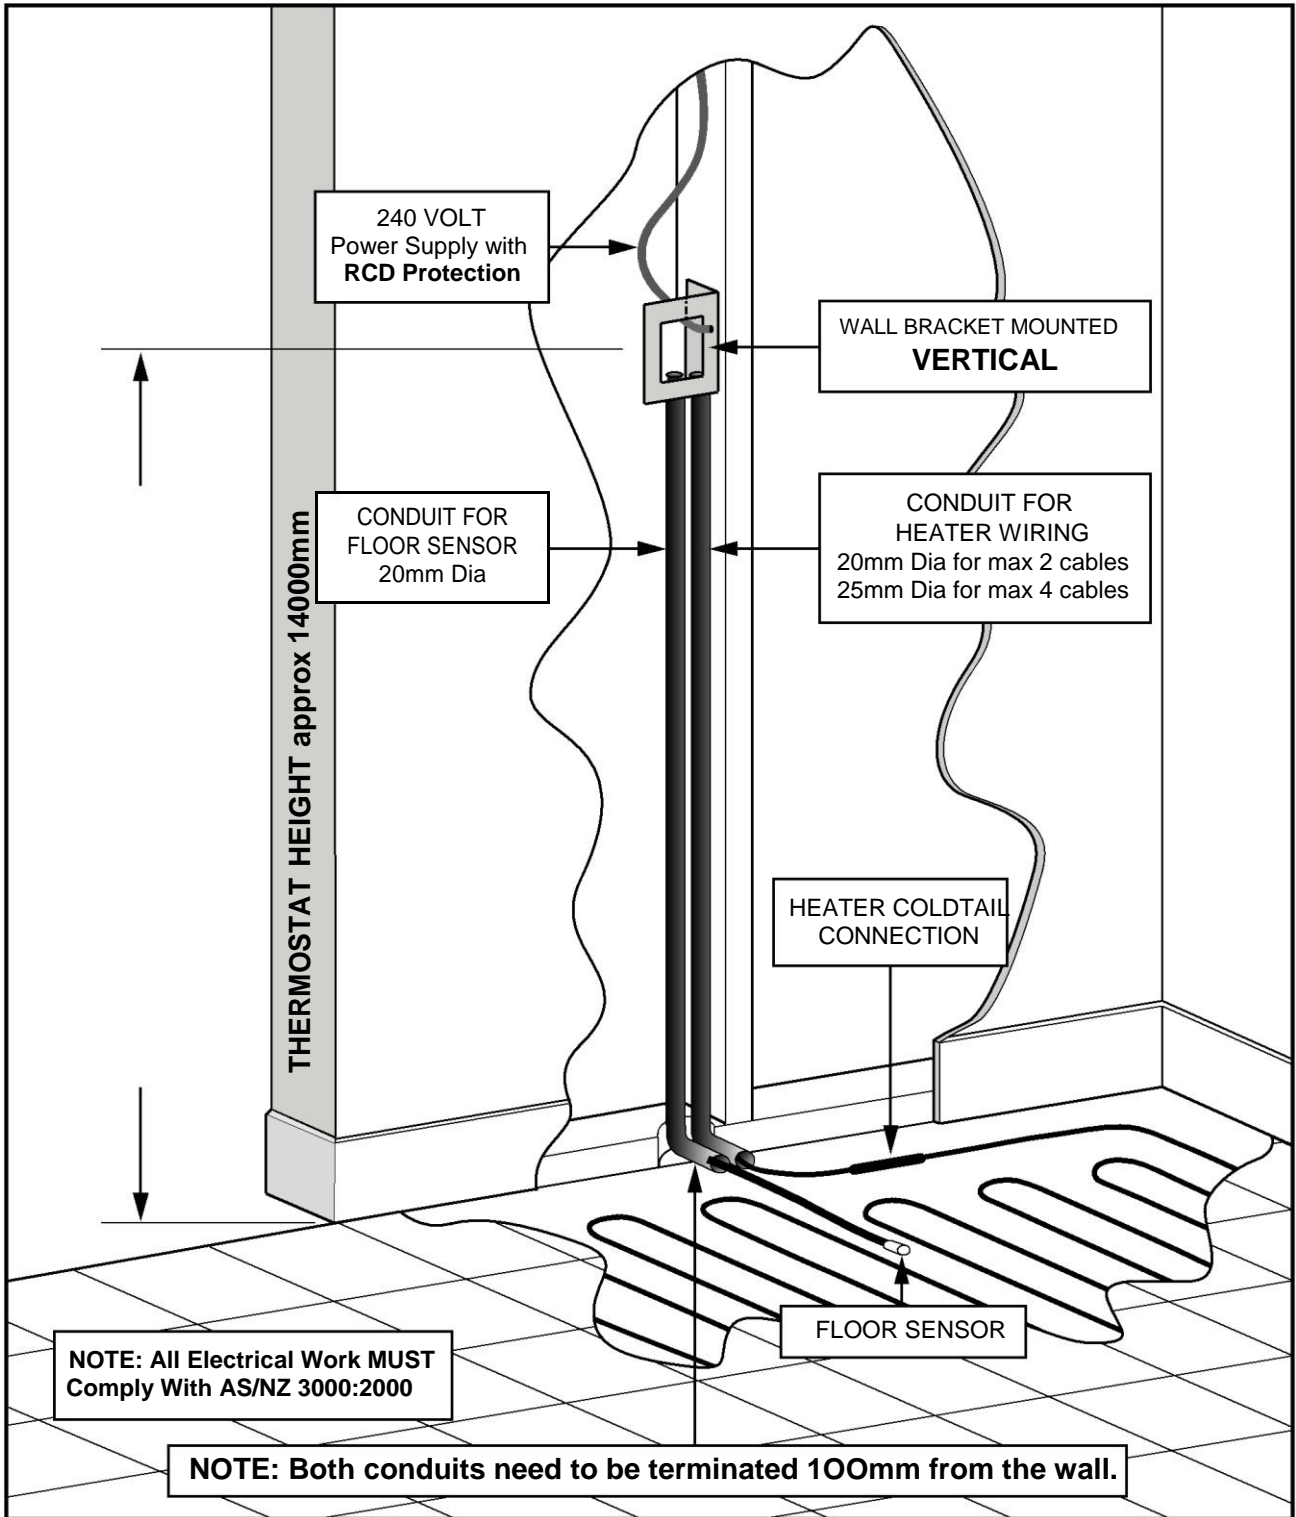


**NOTE: All Electrical Work MUST Comply With AS/NZ 3000:2000**

**NOTE: Both conduits need to be terminated 100mm from the wall.**

In 'Ultra Thin' heating applications the floor will need to be chased to allow the sensor tube and cold tails to be recessed into the floor. Once in place you need to glue it down.

**Before water proofing** chase the floor to allow the floor sensor and cold tails to sit flush with floor level. Measure room and according to your supplied 'Design Layout' chase the floor at the both cold tails (5mm), and sensor tube location (12mm).

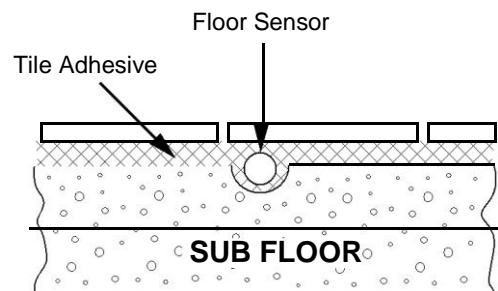

Ultra-Thin Chase Option